



WINTERIZATION AND SUMMER STEP-BY-STEP

info@boreascampers.com
720.515.3775
3004 S Prairie Ave
Pueblo, CO 81005
www.boreascampers.com

EOS-12



CAMP IS WHERE YOU TOW IT

WINTERIZATION



STEP ONE

Raise the tongue of the camper as high as possible. Open fresh water tank drain valve and empty tank. Close valve.




STEP TWO

Use Garmin tablet to raise passenger side of camper. Open grey water tank and drain until empty. Close grey water tank valve.



WINTERIZATION

(CONTINUED)

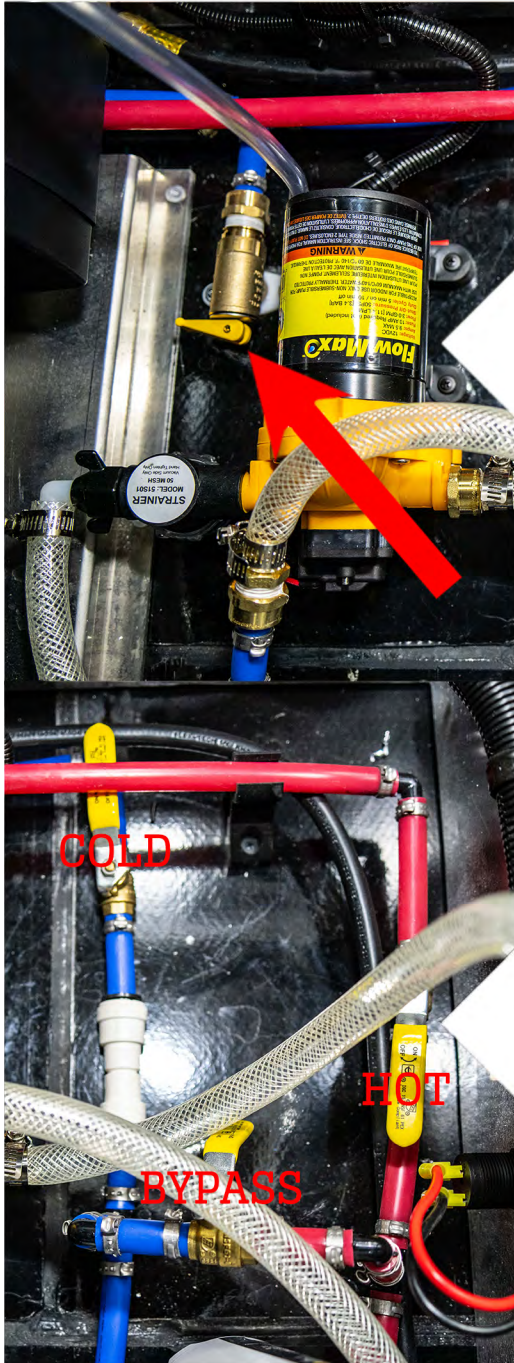

STEP THREE

Return the camper to a level position. Open relief valve under the bed to drain interior lines. Leave valve open until dewinterization.

STEP FOUR

Close the cold and hot water lines to the Combi. Open the bypass valve that connects the two lines.

TIP: When valve handle is parallel with the line the line is open. A closed valve is perpendicular to the line.


****Note: You can still run the Combi off of propane or electric for hot air****



info@boreascampers.com
720.515.3775

WINTERIZATION

(CONTINUED)

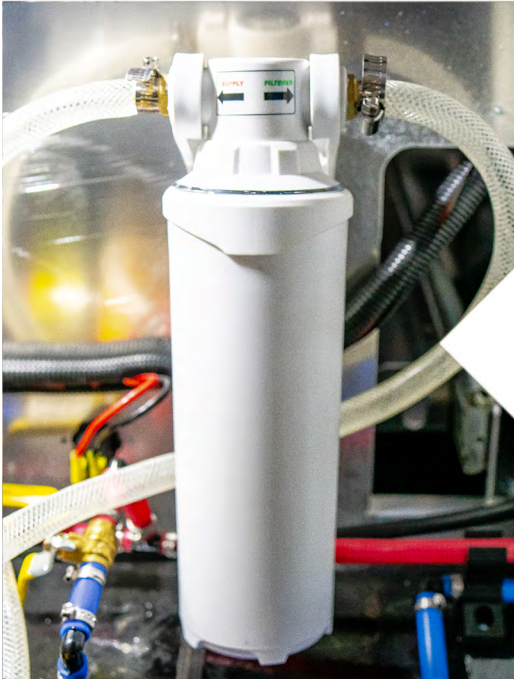

STEP FIVE

Untwist water filter from mount. The assembly will automatically seal. Let filter stand to dry and store in a ziploc bag until dewinterization.



STEP SIX

Add 5 gallons of antifreeze to the fresh water fill port. Flush antifreeze through the indoor and outdoor showers and kitchen sink. Be sure to flush both hot and cold lines for each. Turn off water pump.

Congratulations! You're winterized!



info@boreascampers.com
720.515.3775

SUMMER



STEP ONE

Raise the tongue to its highest point.



STEP TWO

Open the drain at the rear of the fresh water tank and drain out the fluid. It is non toxic so it can go to the ground.



info@boreascampers.com
720.515.3775

SUMMER

(CONTINUED)



STEP THREE

Use the Garmin tablet to raise the passenger side of the camper. Fully drain the grey water tank. Leave grey water drain valve open. Close fresh water tank drain valve. Return camper to a level position.

STEP FOUR

Add two tablespoons of RV tank cleaner or dish soap to remove antifreeze and fill the tank up to 100% capacity. Turn on water pump. Flush indoor and outdoor showers and sink with water and cleaning agent until tank is empty. Be sure to flush both hot and cold lines.



STEP FIVE

Close the grey water drain valve. Refill fresh water tank to roughly 80%.


SUMMER

(CONTINUED)



STEP SIX

Close combi relief valve (as pictured).
Attach water filter to mount.

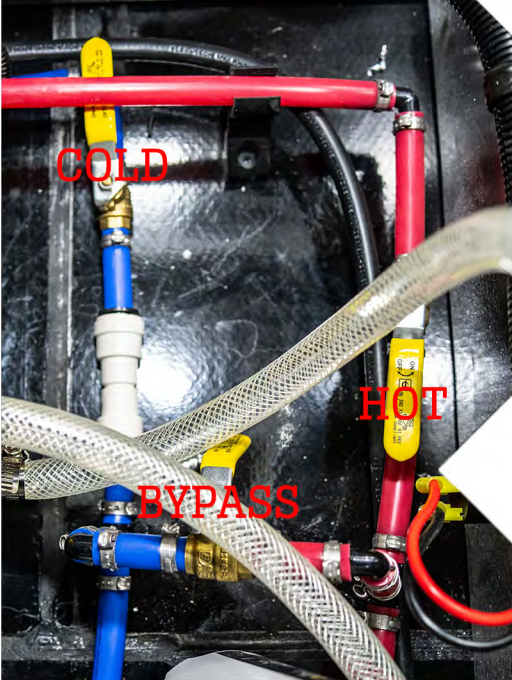

STEP SEVEN

Open cold and hot water valves (as pictured).
Close bypass valve (as pictured).

STEP EIGHT

Fill the remainder of the tank with fresh water.

Congratulations! Your camper is ready for the summer!



info@boreascampers.com
720.515.3492